




Sony SLT-A57 Optical Viewer Replacement

This guide will show how to correctly replace the optical viewer on a camera.

Written By: AJ Draper

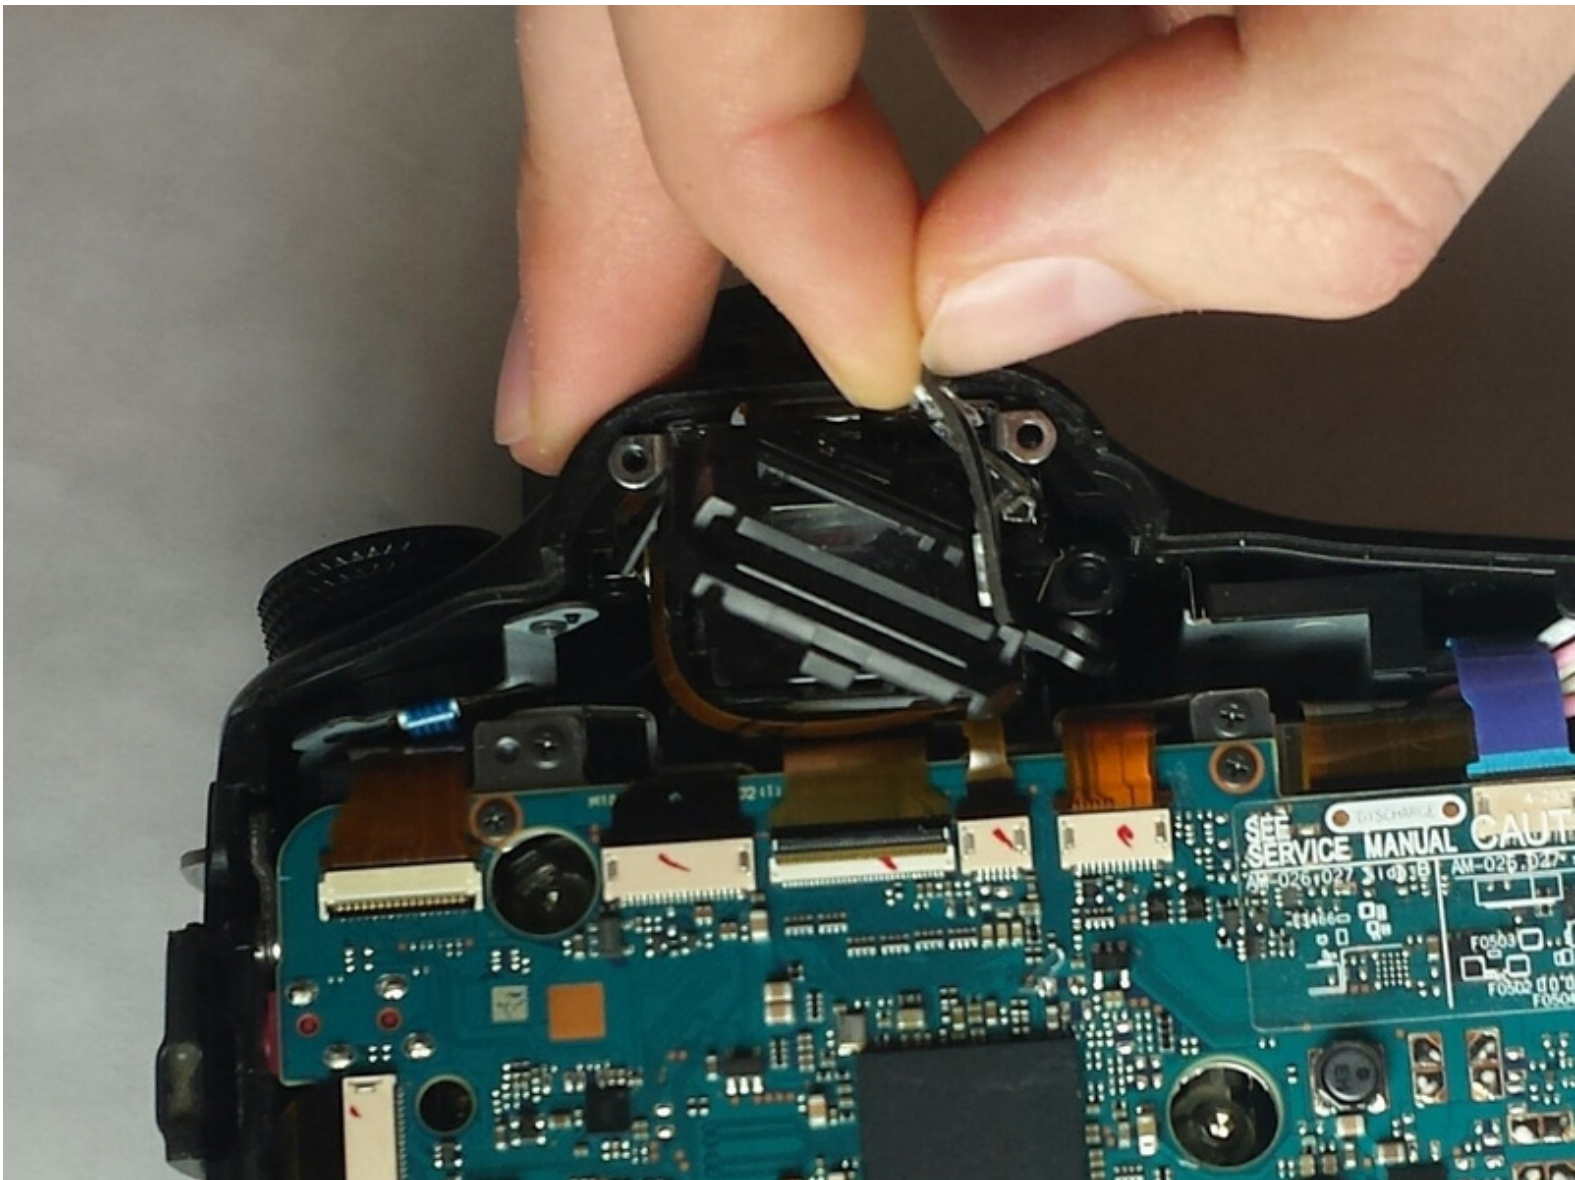



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [8" Needle Nose Plier](#) (1)



PARTS:


- [Sony SLT-A57 Viewfinder](#) (1)

Step 1 — Unscrew the Optical Viewer

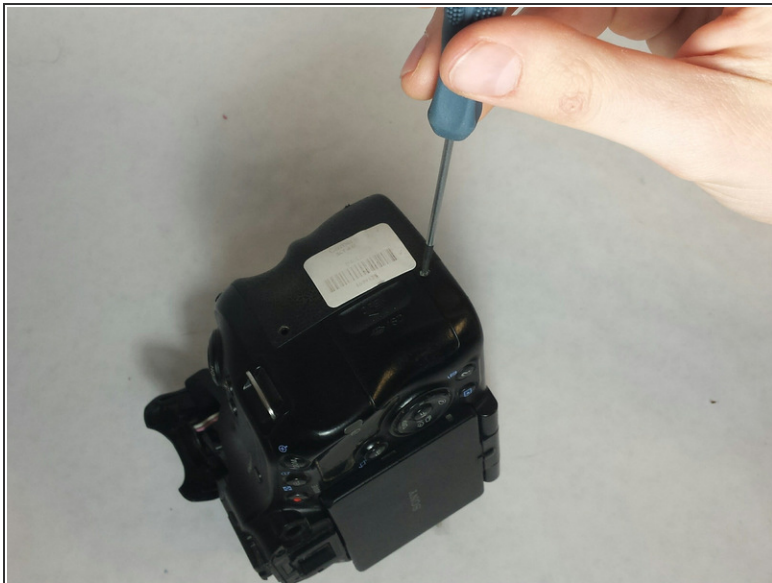


- Unscrew every screw on the side and back camera to pry open the back plastic portion of the camera. The screws will be 2.1mm and 1.5mm.

Step 2 — Open the camera

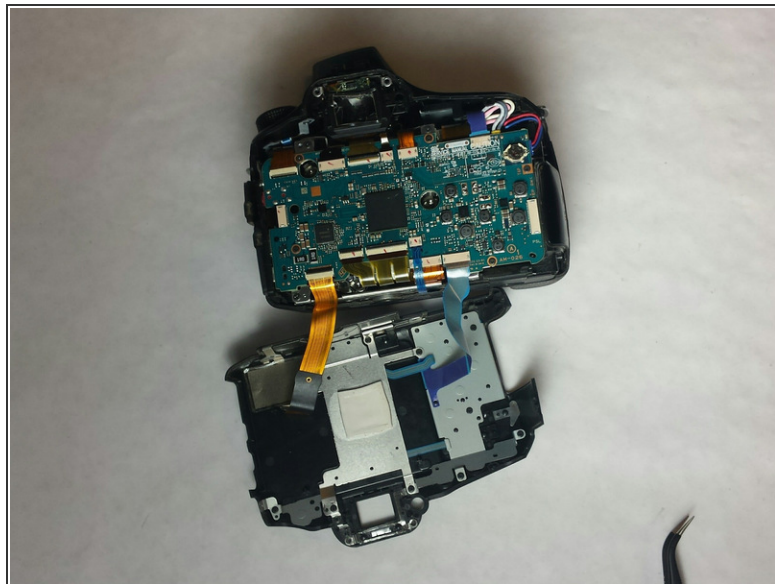

- Once all of the screws are out, open the camera like shown in the picture

Step 3 — Replace The Optical viewer with a new one

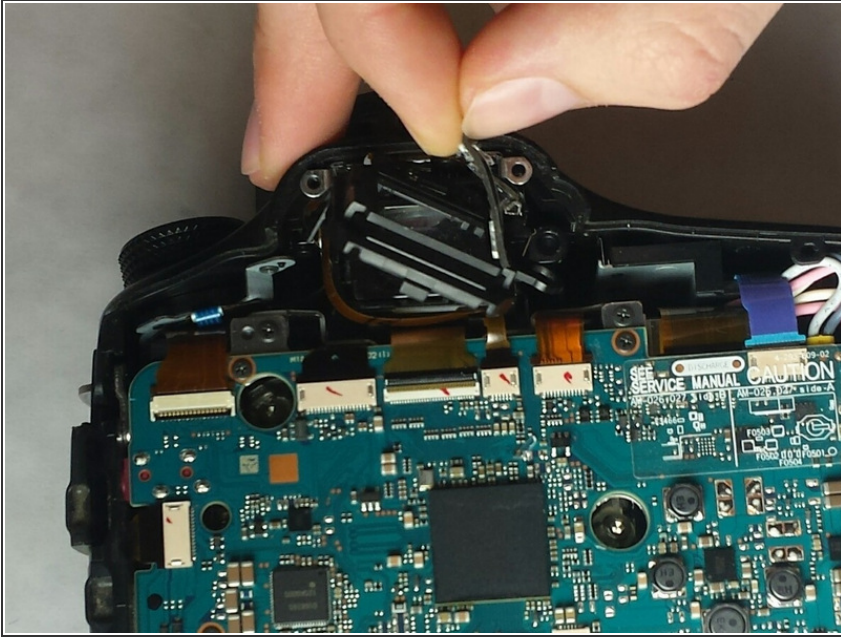

- Replace the sticky Optical viewer with a new one. and close the camera by putting all of the screws back in

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 09:20:36 PM.